


TLX Gold installation details

Vertical joint

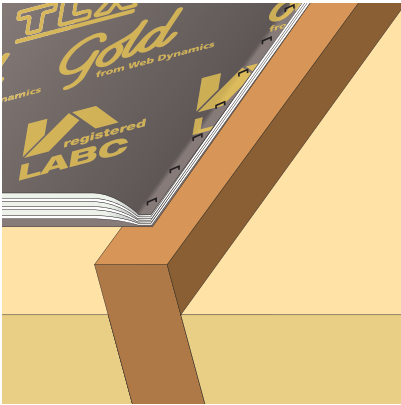


Unroll the TLX Gold across the top of the rafters. At the end of the roll, cut back the TLX Gold so that it ends at the middle of a rafter. Staple the end of the TLX Gold to the rafter.

Horizontal joint



Starting at the bottom of the roof, roll TLX Gold across the rafters, and hold in place with staples


Fit a line of double-sided tape along the top edge of the TLX Gold

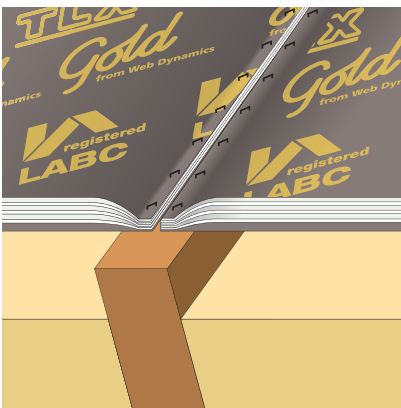

Butt the end of the next roll of TLX Gold against the end of the first roll. Staple the second roll to the rafter.




Lay a second roll of TLX Gold above the first roll. The bottom edge should butt closely up against the first roll. Fix the overlap of breather membrane on the top layer of TLX Gold to the double sided tape to create a seal.

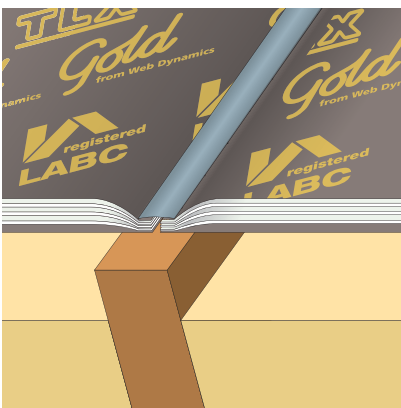

Tape over the overlap and the staples using a 50mm wide waterproof tape.



Lay a line of single sided tape across the staple holes

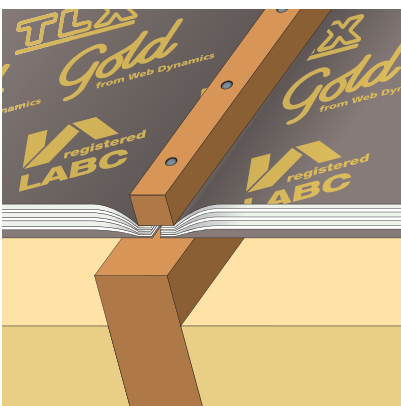

Nail a 38 x 38mm counter batten along the rafter to cover the tape and hold both pieces of TLX Gold firmly in place.



Fit counter battens along the line of the rafters


Nail 25mm tiling battens across the counter battens, and fit tiles or slates.

Fit the tile battens across the top of the counter battens


Contact the thermal hotline 01204 674 730 for technical advice

TLX Gold installation details


Eaves

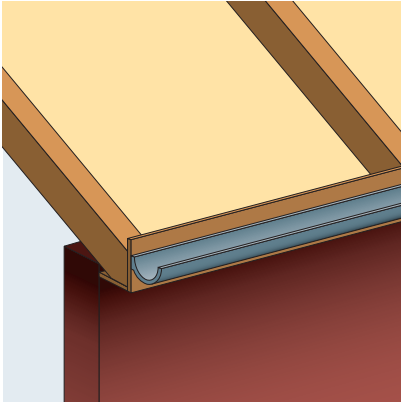


Construct eaves using fascia and soffit boards and fix guttering.

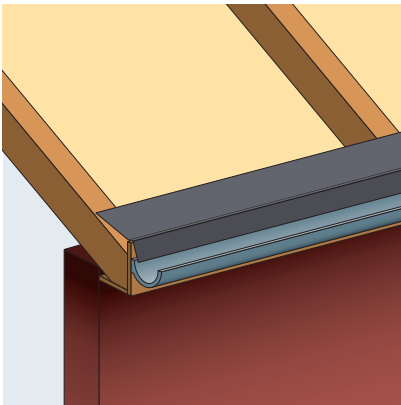

Fit eaves carrier over the end of the rafters so that it runs down into the gutter.

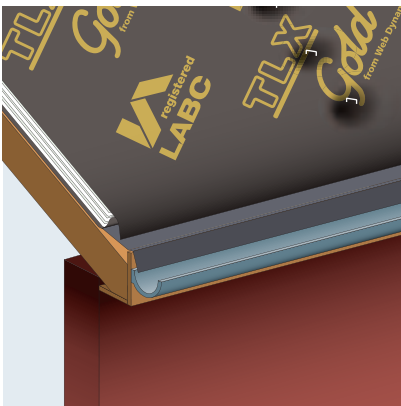


Install TLX Gold above rafters, such that the flange of breathable underlay along the bottom edge of the TLX Gold drapes over the eaves carrier. Staple the TLX Gold to the rafters

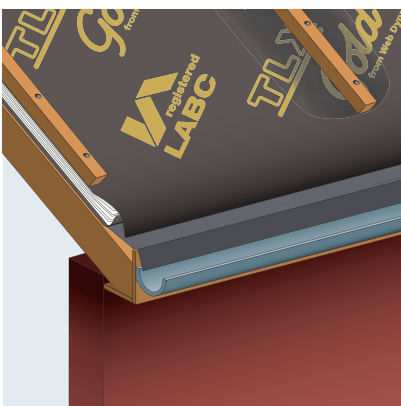


Fix counter battens down the rafters to hold the TLX Gold securely in place. Fit tile battens and tiles.

Fit the tile battens across the top of the counter battens


Rooflights and chimneys

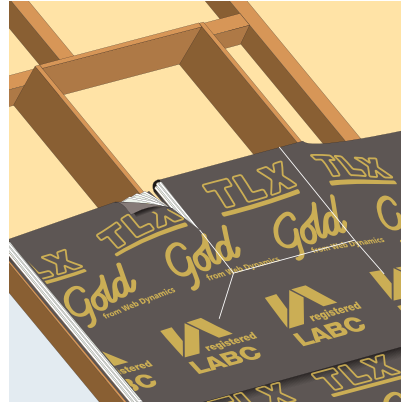


Unroll TLX Gold across the area of the roof window. Cut the top layer as shown in the diagram and fold back the flaps produced by the cut.

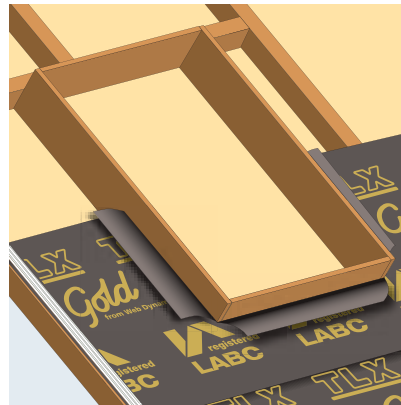

Cut out the remaining layers of TLX Gold around the edge of the window.

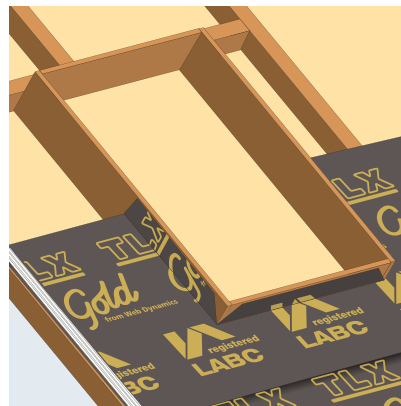

Fix the flaps formed from the top layer of TLX Gold to the sides of the window frame.

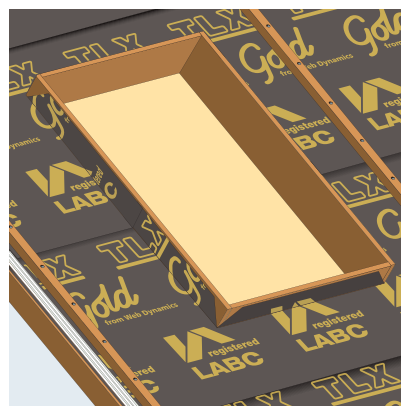

Fit further rolls of TLX Gold and counter batten.